

01-0085 Warning instructions when hood open



There is a risk of injury when the hood is open and the engine running.

The engine is equipped with an electronic ignition system. Because of the high ignition voltage it is extremely hazardous to touch components of the ignition system (ignition coil, ignition distributor, ignition cables, spark plug connector, test socket) if

- the engine is running
- the engine is started
- the key is in position 2 in the steering lock and the engine is cranked by hand.

