

A. Removing and disassembling fuel pump set

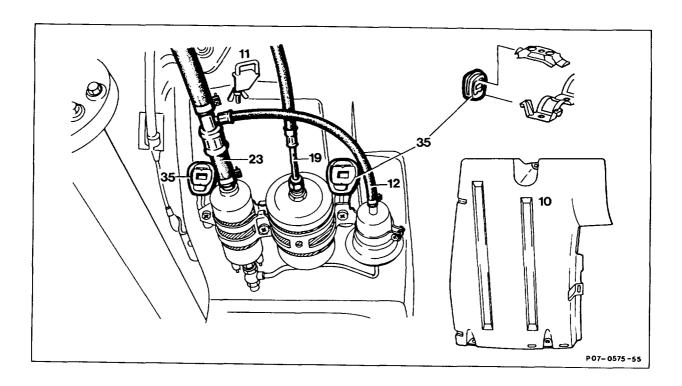


Vacuum in fuel tank	release by opening cap.
Ground cable at battery	disconnect.
Protective box (10)	unscrew.
Electric wiring at fuel pump	disconnect.
Fuel suction hose and fuel pressure hose	
(19, 23)	pinch off with clamp (11).
	Special tool 000 589 40 37 00.
Fuel suction hose, pressure hose and leak	
hose (19, 23, 12)	unscrew.
Rubber rings (35)	remove.
Fuel pump set	disassemble.

Special tool

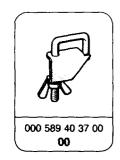

B. Assembling fuel pump set

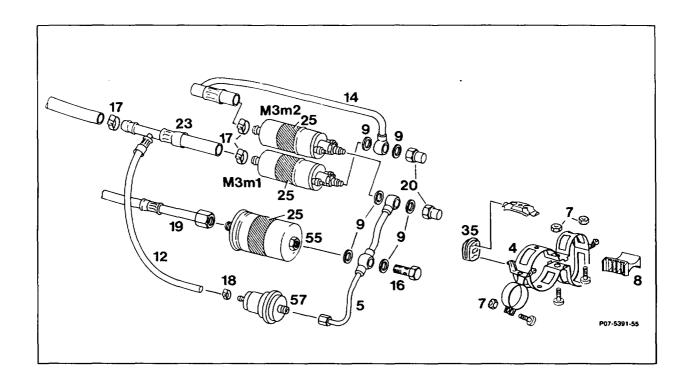

4	Holder
5	Fuel line
7	Nut
8	Spacer sleeve
9	Seal
12	Leak hose
14	Fuel line
16	Banjo bolt
17	Hose clip


18 Hose clip Fuel pressure hose 19 23 Fuel suction hose 25 Plastic sleeve 35 Rubber ring Fuel filter 55 57 Fuel accumulator Fuel pump 1 M3m1 M3m2 Fuel pump 2


Fuel pump set assemble.


Note


When assembling the fuel pump set, it is essential to ensure that the plastic sleeve (25) is fitted between fuel pumps and holder (4). It must project on both sides of the holder as direct contact between the fuel pump and the holder can produce contact corrosion.

C. Installing fuel pump set

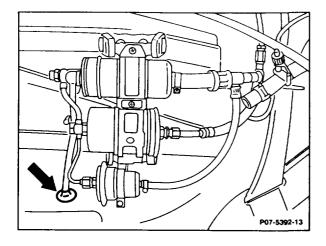

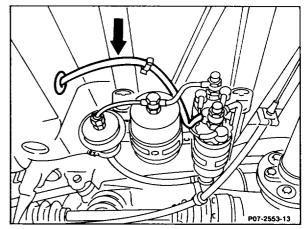

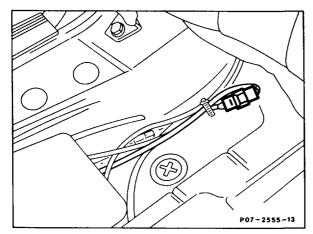

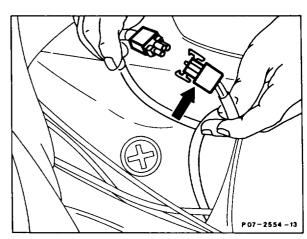

Previous wiring harness

New rubber rings

Fuel pump set

Fuel hoses

New wiring harness 124 540 78 10

Wiring harness

Rear seat squab

Cable shoes and rubber caps

push into vehicle interior.

install.

lay and connect free of kinks.

connect to fuel pumps.

lay in interior and install rubber grommet.

remove, install.

cut off on standard wiring harness.

Both cables insulate. Bushes solder on. and coupling 008 545 08 28 install. Pay attention to polarity! plug together and fix with cable strap. Wiring harness Ground cable at battery connect. check with engine running. Leaktightness of all connection points

install.

Note

Model 124.026/030

Since September 1986 a second fuel pump has been installed in these vehicles with an indefinite production breakpoint.

New protective box

If engine running problems occur on vehicles manufactured prior to this date which are due to the formation of vapour bubbles during extreme outside temperatures, a second fuel pump can be installed.

When dealing with the complaint "fuel pump loud" (see microfilm Fault finding, Group 07.3), installation of a second fuel pump does not offer any remedy.

Production breakpoint

Model	Vehicle ident end no.
124.026/030	1A 368937

Parts

Qty	Designation	Part no.
2	Fuel pump	002 091 88 01
1	Holder	124 470 20 81
1	Spacer sleeve	201 478 01 53
1	Fuel line	124 470 28 64
1	Fuel line	201 470 24 64
1	Fuel suction hose	124 470 37 75
1	Closing nut	123 990 00 53
6	Seal	000 997 56 44
2	Hose clip 21 mm diameter	916033 021100
1	Hose clip 11 mm diameter	916033 011100
1	Wiring harness	124 540 78 10
1	Coupling	008 545 08 28
2	4 mm dia. bush	003 545 26 26
1	Cable strap	001 997 42 90
1	Protective cover	124 478 04 37
4	Rubber ring	124 478 05 82
1	Fuel filter	002 477 13 01