


30-550 Removal and installation of sensor (models 124, 201)

Preceding work:
Instrument cluster removed (54-250).

Operation no. of the operation texts and work units and standard texts and flat rates

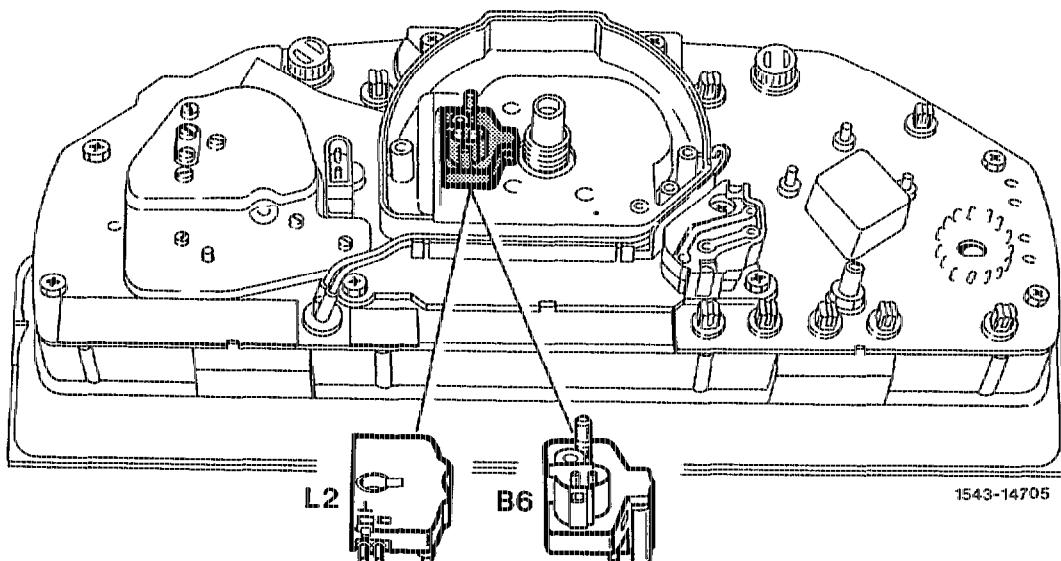

- Fastening screw of sensor (B6 or L2) unscrew, screw on.
Sensor (B6 or L2) remove, install.
Function test perform on road.

Note

Hall-effect speed sensor (B6) on model 124 and
model 201 starting approx. 09/85.

Road speed sensor (L2) on model 201 up
to approx. 08/85.