


30-566 Removal and installation of cruise control reference resistor

Preceding work:
Cover at left or right under instrument panel
removed (68-150).

Operation no. of operation texts and work units or standard texts
and flat rates

A. Model 124

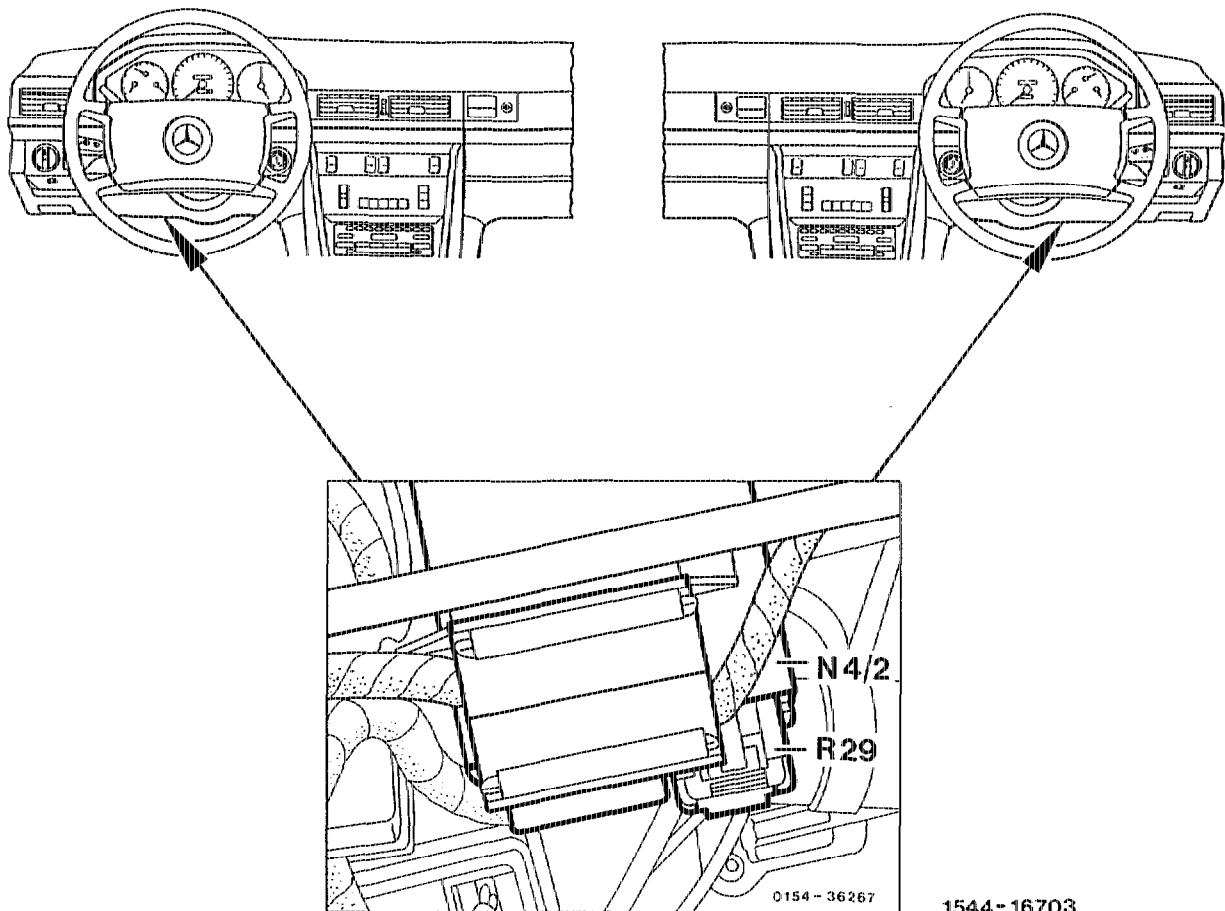


Tempomat/cruise control reference resistor (R29)
at Tempomat/cruise control (TPM) reference
resistor amplifier (N4/2)

disconnect, by pushing lateral retaining tongues
and connect.

Function test

perform on road.


B. Model 129

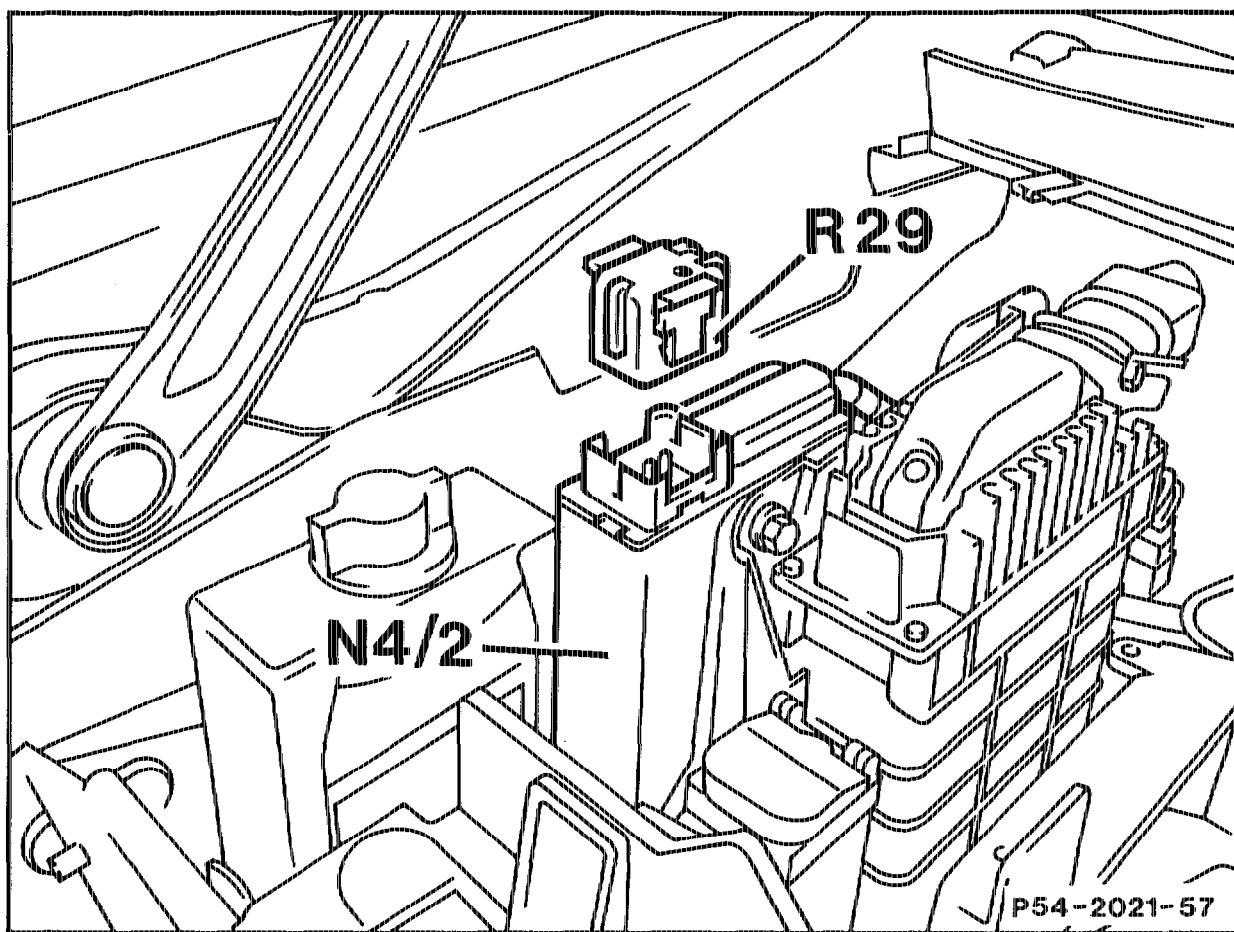

- Cover of unit compartment, right remove, install.
Tempomat/cruise control reference resistor (R29)
at Tempomat/cruise control (TPM) reference
resistor amplifier (N4/2) disconnect, by pushing lateral retaining tongues
and connect.
Function test perform on road.




C. Model 140

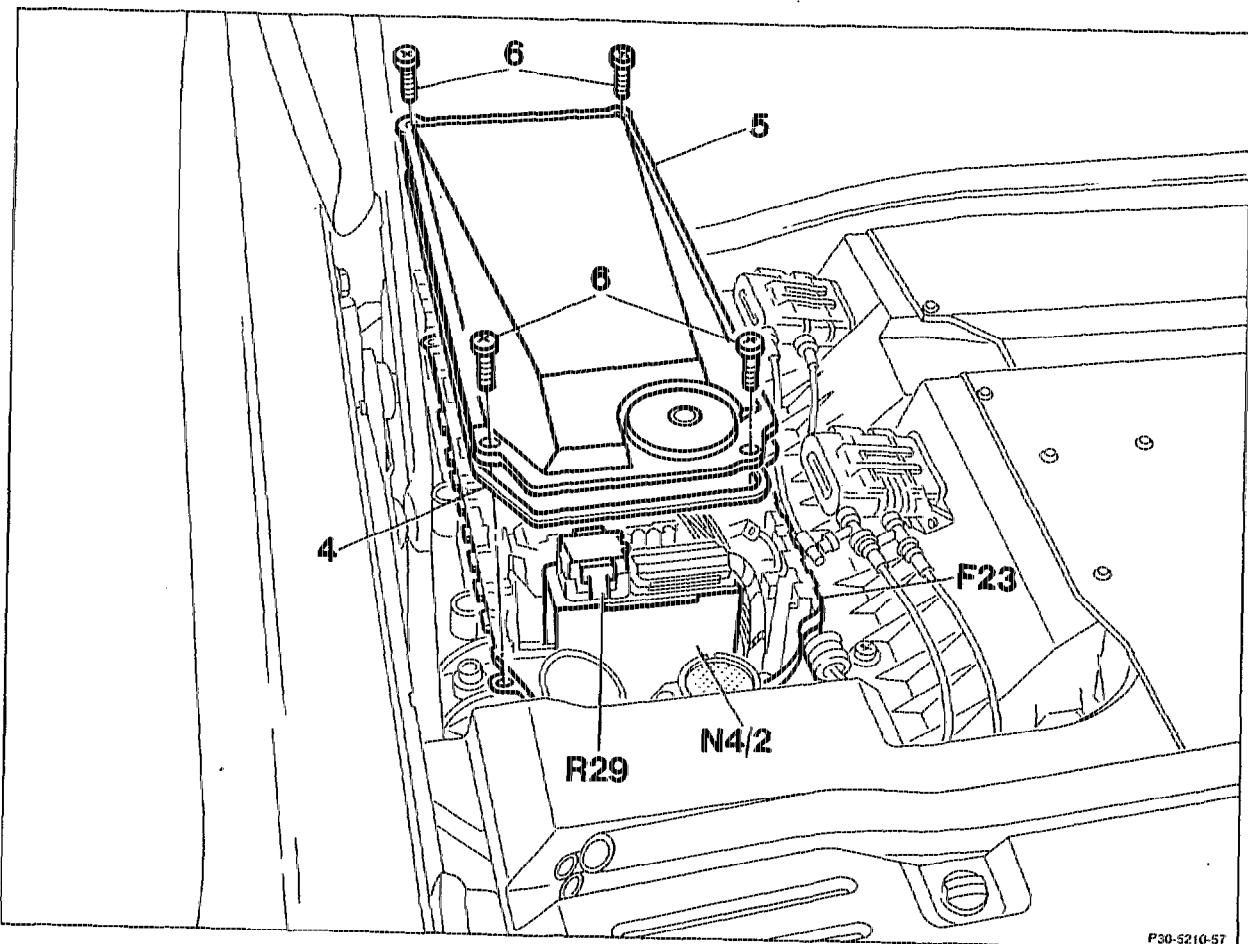

- Screws (6) unscrew, screw in.
Cover (5) of module box (F23) lift, install.
Gasket (4) check for damage, when installing, ensure correct seat of gasket (4).
Tempomat/cruise control reference resistor (R29)
at Tempomat/cruise control (TPM) reference
resistor amplifier (N4/2) disconnect, by pushing lateral retaining tongues
and connect.
Function test perform on road.

D. Model 201

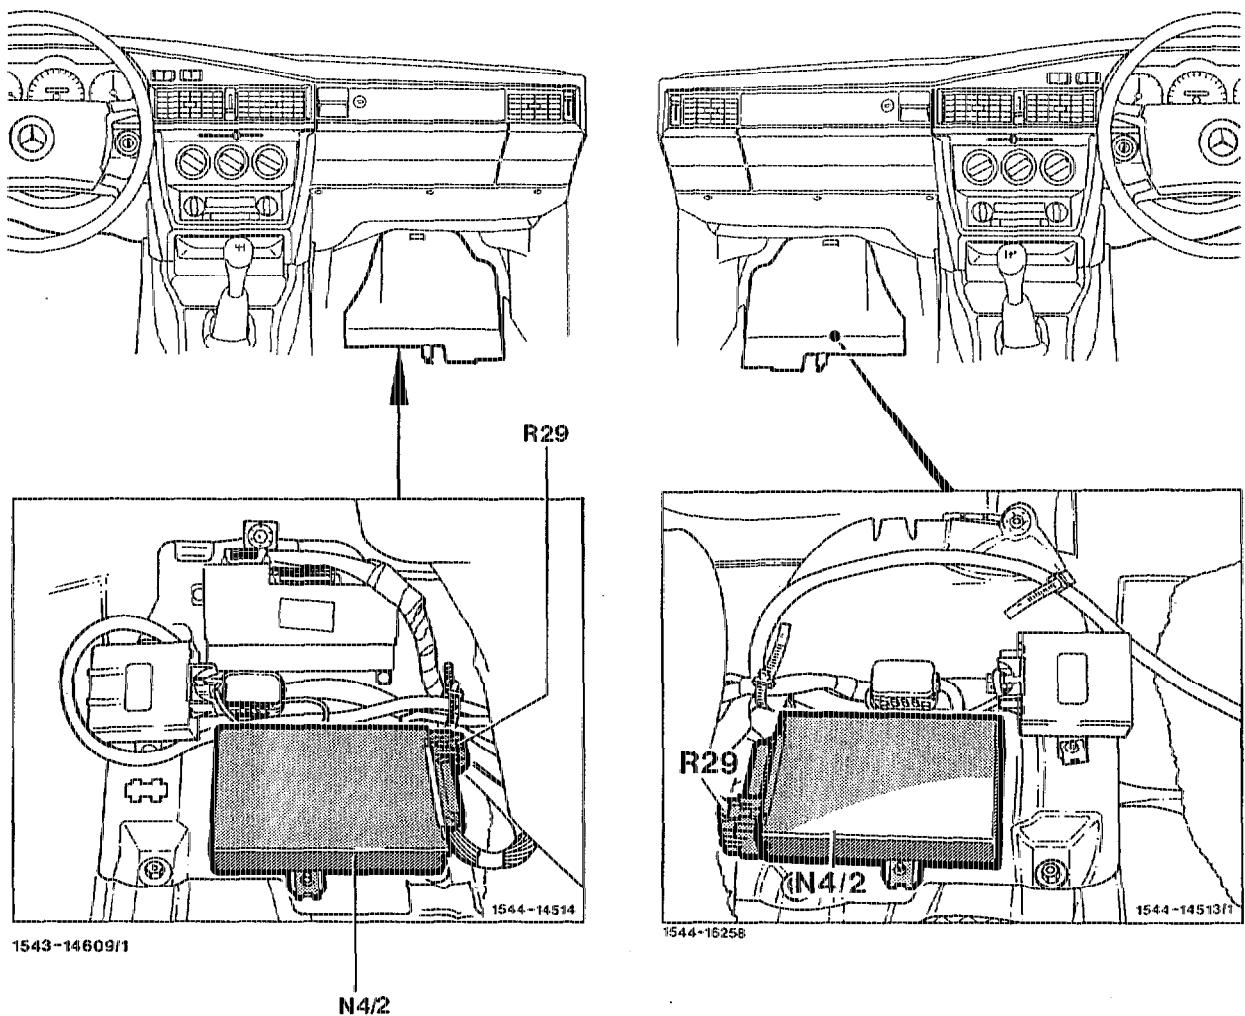

- | | |
|---|--|
| Floor mat front right or left | remove, install. |
| Foot support front right or left | remove, install. |
| Tempomat/cruise control reference resistor (R29)
at Tempomat/cruise control (TPM) reference
resistor amplifier (N4/2) | disconnect, by pushing lateral retaining tongues
and connect. |
| Function test | perform on road. |

