


All models

A. Supporting ball joint


- Carefully check condition of ball joint rubber boots.

Note:

In the event of a leaking rubber boot, replace respective joint or control arm immediately, since any dirt that enters will destroy the joint within a short period. Replacement of a rubber boot is permitted only if it is certain that no dirt has as yet entered the joint.

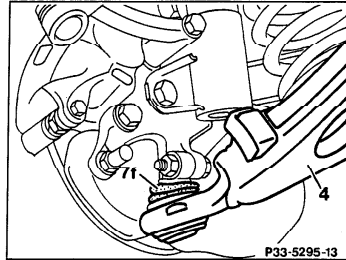

Models 124, 129 supporting ball joint

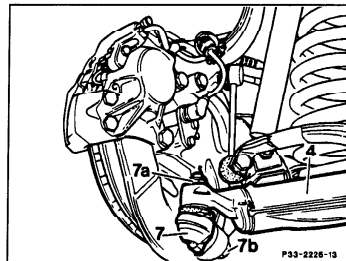

Model 140, 202 supporting (lower) ball joint

B. Guide ball joint


Model 140, 202

- Carefully check condition of ball joint rubber boots.

Note:

In the event of a leaking rubber boot, replace respective joint or control arm (6) immediately, since any dirt that enters will destroy the joint within a short period. Replacement of a rubber boot is permitted only if it is certain that no dirt has as yet entered the joint.


Model 140 guide (upper) ball joint

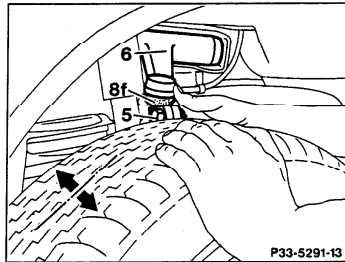

P33-5291-13

- Raise vehicle to unload ball joints.
- Check play by touching upper ball joint (8f) while vigorously pushing and pulling front wheel in and out (arrows).
- Repeat procedure on opposite side.
- If ball joint has play, replace upper control arm.

Model 202 guide (upper) ball joint

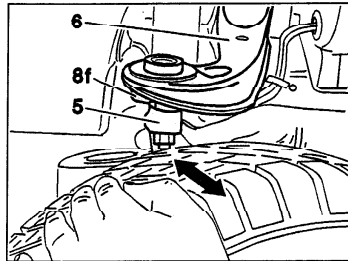

P40-5416-13