


All models

Note:


Vehicle should be horizontal when checking oil level and when changing oil.

- Prior to oil change, check rear axle for leaks.
- Drain oil only with rear axle at operating temperature.
- Add specified quantity of oil.

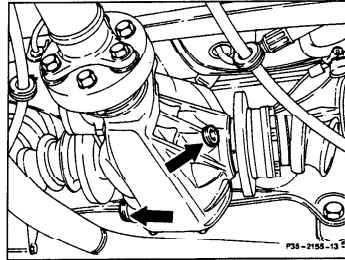


Model 124

- Check oil level. Oil level should be up to filler opening.
- Torque oil filler plug and drain plug to 50 N.m.

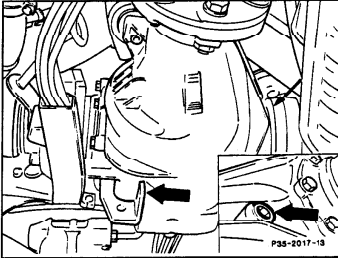

Model 129, 140

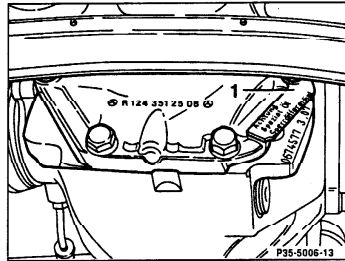

Vehicles with ASD

- 1 Information plate for limited slip differential

3501

Rear axle oil change

Oil grades

Differential **without** limited slip approved oil grades

Hypoid gear oil SAE 90, 85W/90
Refer to MBNA Factory Approved Service Products list

Differential **with** limited slip and vehicles with ASD approved oil grades (note information plate on rear axle housing)

Special hypoid gear oil SAE 90
Refer to MBNA Factory Approved Service Products list


Capacities - vehicles without ASD

Model	Liters
124, 129.063, 140.03/04	1.3
202.022/028	1.1
129.067/076 140.05/07	1.4

Capacities - vehicles with ASD

Model	Liters
202.022	1.3
140.134	1.4

Special tools

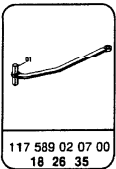

Equipment

14 mm hex. driver insert, 1/2" square drive

obtain locally