
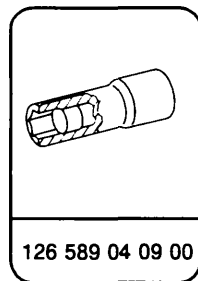


All models

Torque specifications	Nm
Wheel bolts M12 x 1.5 (All models except 140)	110
Wheel bolts M14 x 1.5 (Model 140 only)	150

Special tools

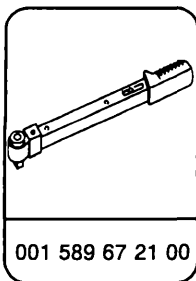

- Remove wheel covers from steel wheels, if so equipped.
- Always tighten wheel bolts with torque wrench.
- **Torque in correct sequence (arrows).**
- Replace wheel covers on steel wheels.

