

#### Removing and installing poly V-belt pulley (fan assembly) 15-5700

Preceding work: Fan cowl removed, engine 104 Poly V-belt removed (13-342) Engine compartment panelling removed (61-0105) engines 102, 103 Alternator removed (15-5032) engines 104, 111, 119.974/975, 602, 603, 605, 606 Front noise encapsulation removed (94-5310)

Operation no. of operation texts and work units or standard texts and flat rates:

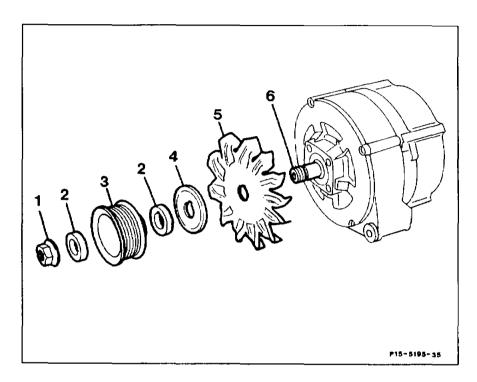

Bowl-type alternator

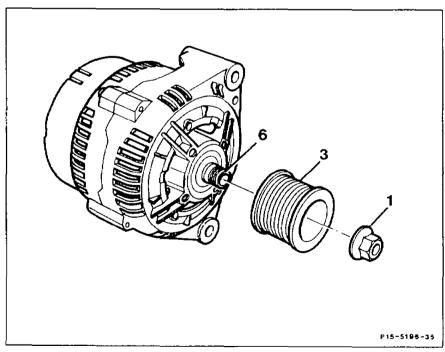

Compact alternator

Ground cable at battery ..... disconnect, connect. Collar nut (1) ......

unscrew, screw on.

## "Only bowl-type alternator"

Tightening torque 70 Nm. Use hexagon socket bit (8 mm) with reversing ratchet for holding the shaft (6).

## "Only compact alternator"

Tightening torque 80 Nm. Use serrated bit (10 mm) with reversing ratchet for holding the shaft (6).

# Only bowl-type alternator

Spacers (2), poly V-belt pulley (3), supporting washer (4), fan wheel (5) ...... take off, fit on.

## Only compact alternator

Poly V-belt pulley (3) ..... take off, fit on.

#### All alternators

#### Note

The fan wheel is subjected to very different stresses. The level of these stresses depends primarily on the driving conditions. For this reason, when repairing or exchanging alternators on cars which have driven more than 100 000 km, also replace the fan assembly at the same time.

#### Special tools

