



P40-0076-57A

MB quick-clamp holders (040 ) .....

Attach part no. 124 589 01 31 00 to front and rear wheels. Remove clamping handles. The mounting bell can be centered in relation to the front wheel hub or rear axle flange with tracer pins via the five mounting holes (arrows) in the disk wheel.

Mount wheel mirror or measuring sensor.

Quick-clamp holder (040), wheel mirror (041, 042) or measuring sensor .....

Check at regular intervals (refer to manufacturer's specifications).

Special tool

