


All gasoline engines

## Special tools

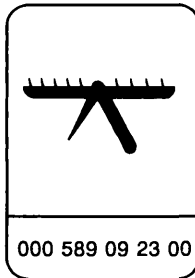

On engine 110 (illustration), blow out spark plug wells in cylinder head before removing spark plugs.

Remove spark plugs and check for deposits on electrodes. If deposits are present, replace spark plugs.

If no deposits are present, regap spark plugs to specification.

Install spark plugs and torque to 25-30 Nm.

